

How to upgrade TP-LINK SMB routers?

This guide **applies to** TP-LINK SMB routers, including **TL-R470T+, TL-R480T+, TL-ER5120, TL-ER604W, TL-ER6020, TL-ER6120.**

Notice:

 
- Please verify the **hardware version** of your device for the firmware version. Wrong firmware upgrading may **damage** your device and void the warranty.




TL-ER604W V1.130116	Published Date	16/01/13	Language	English	File Size	4.95 MB
	Modifications and Bug Fixes	Official firmware first release.				
	Notes	For TL-ER604W V1				

- After you downloaded the firmware from TP-LINK website, please use a decompression software such as WinZIP or WinRAR to extract the firmware file to a folder;
- Do NOT turn off the power or cut down the Ethernet cable during upgrade process;
- Please write down all current settings as a backup and enter them manually after upgrading.
- Internet Explorer(IE) is recommended to upgrade the firmware.


Step 1 Log into the Router by typing **http://192.168.0.1** in the address bar of the web browser (such as Internet Explorer, Firefox). The **Username** and **Password** are both **admin** unless you have changed it before.




Step 2 Then go to the page **“Maintenance/Management/Firmware Upgrade”**, see as below:

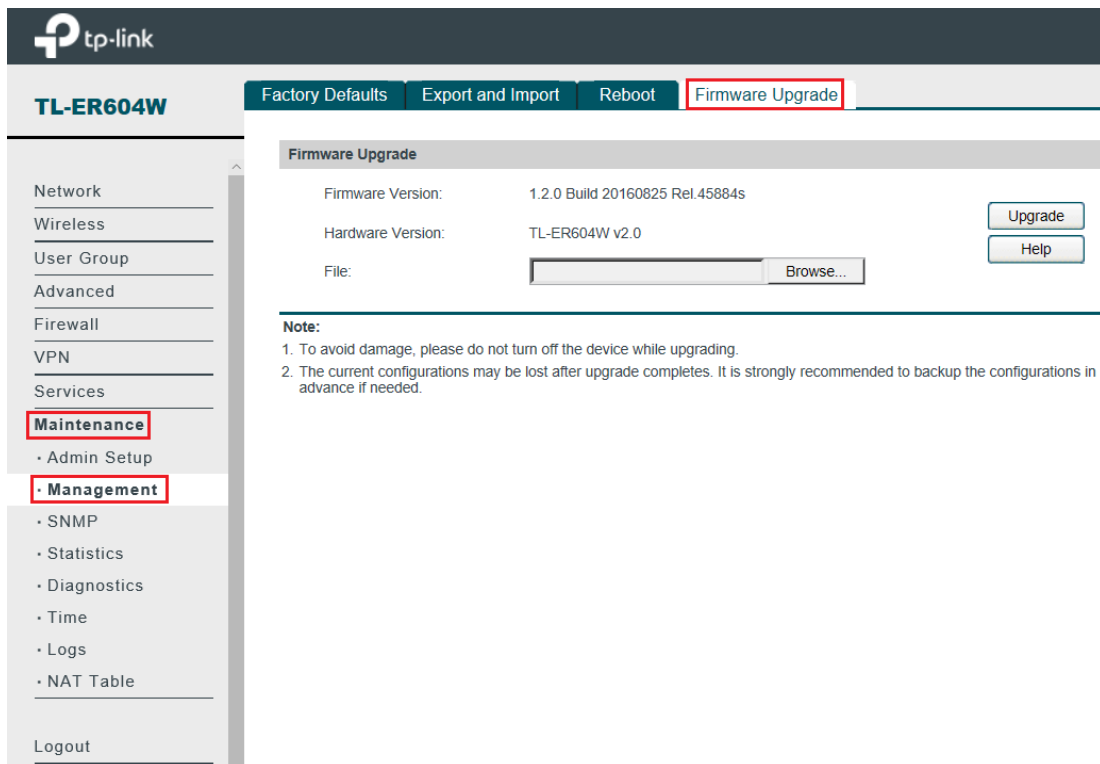


Step 3 Click on **Browse** button, select the firmware file you have extracted from the ZIP file, then click on **Upgrade** button, see as below:

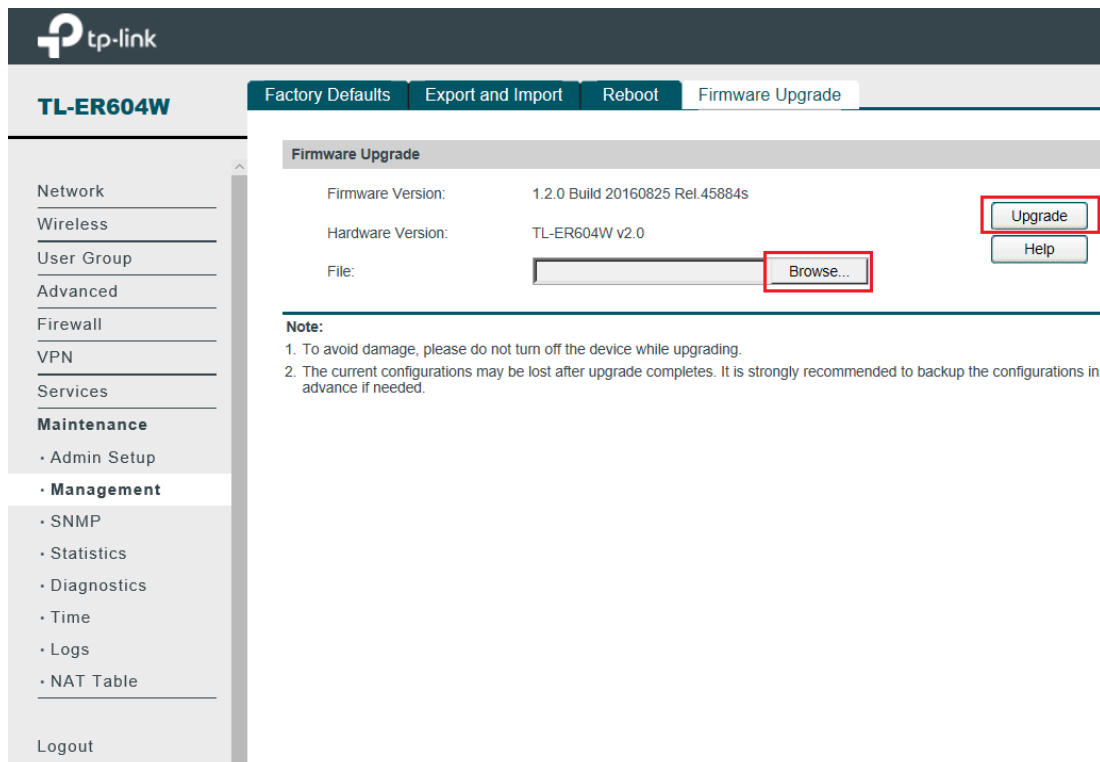

Step 4 Click on **OK**.

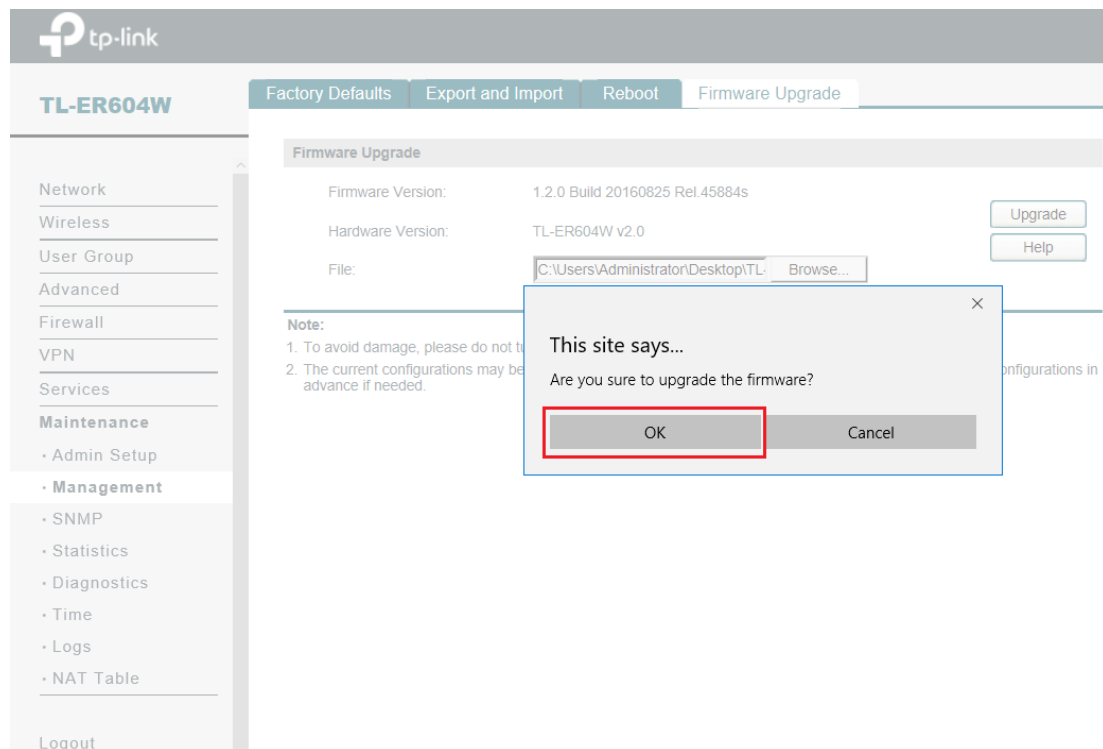

Step 5 Wait for a moment to finish the upgrading, see as below, it take a few minutes.

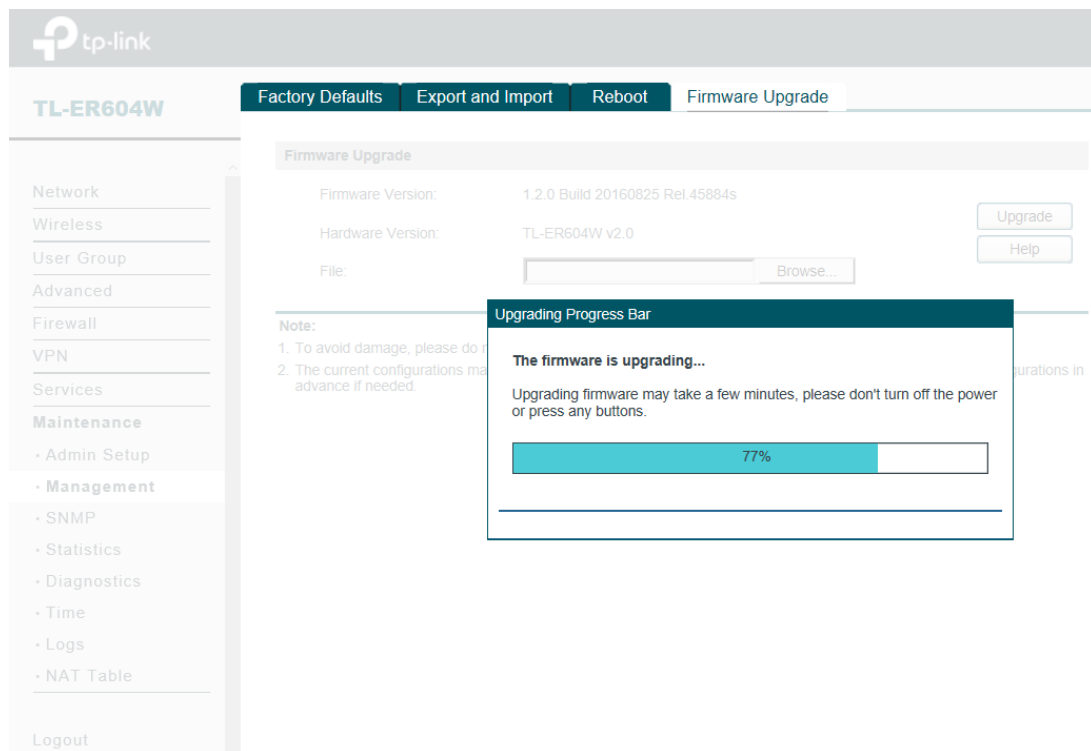

Congratulations! The upgrading is OK now.