


Quick Installation Guide

ADSL2+ Modem Router

EAC

MODEL NO. TD-8816/TD-8817

1 Connect your devices step by step following the figure.

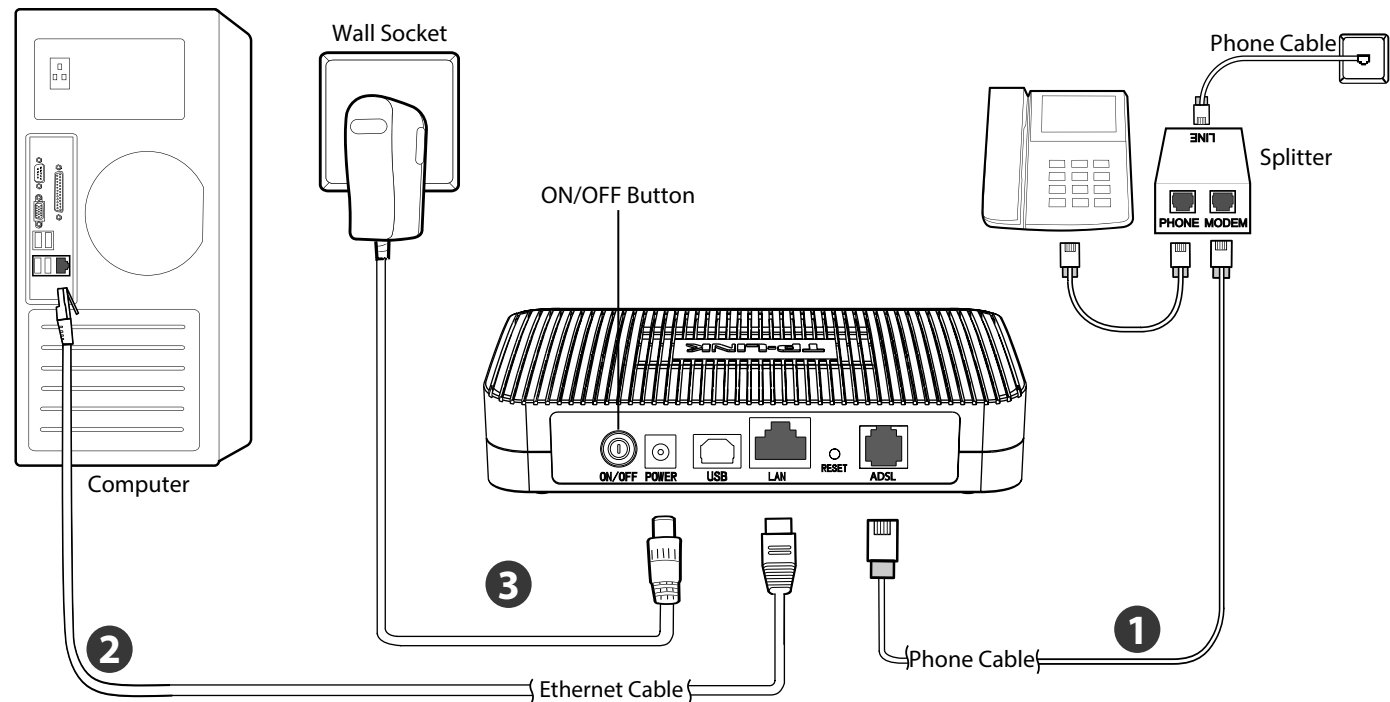


Necessary Information

For a smoother setup, we suggest you consult your ISP for the following information first. The information will be necessary during the configuration stage.


VPI/VCI: _____ Connection Type: _____
Encapsulation Type (Optional): _____

2 Press the **ON/OFF** button of your modem router and make sure the LEDs (especially the ADSL LED) display as shown below.

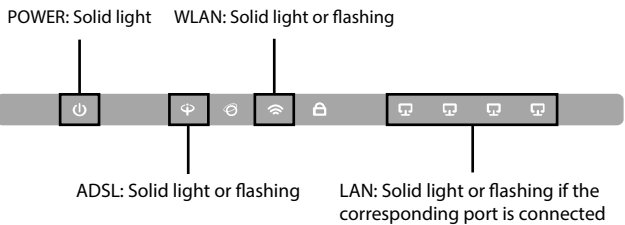


3 Set your computer to **Obtain an IP address / DNS server address automatically**. For details, please refer to **T1** in **Troubleshooting**.


4 Open your browser and type in **http://192.168.1.1** in the address field, then press Enter. Use the default username **admin** and password **admin** to log into the web-management page.

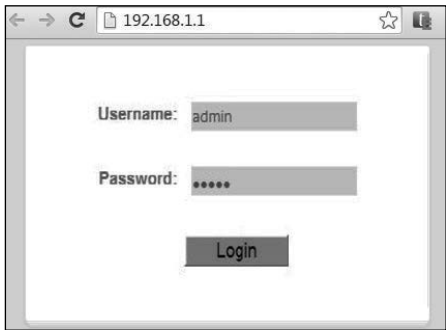

5 Choose **Quick Start** in the main menu and click **RUN WIZARD**. The next screen will appear as below, then click **NEXT**.

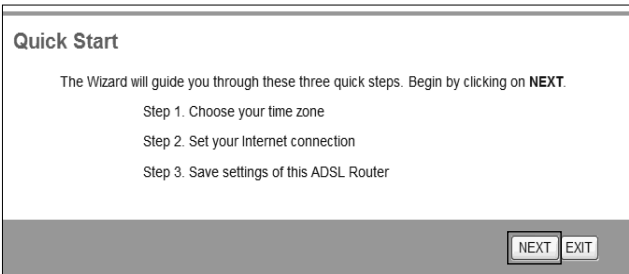

6 Select the corret time zone for the modem router, and then click **NEXT**.

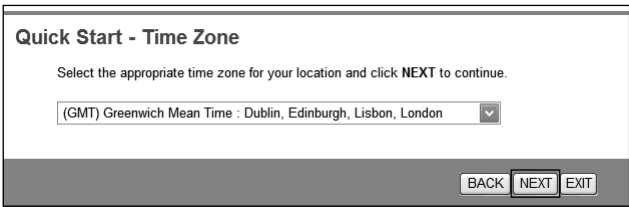

- 7** Select the **Connection Type** given by your ISP and then click **NEXT**. Here we use **PPPoE/PPPoA** as an example.

Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click **NEXT** to continue.

☐ Dynamic IP Address	Choose this option to obtain a IP address automatically from your ISP.
☐ Static IP Address	Choose this option to set static IP information provided to you by your ISP.
☒ PPPoE/PPPoA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
☐ Bridge Mode	Choose this option if your ISP uses Bridge Mode.

BACK NEXT EXIT

- 8** Enter the **Username** and **Password** provided by your ISP and then click **NEXT**.

Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click **NEXT** to continue.

Username:

Password:

VPI: (0~255)

VCI: (1~65535)

Connection Type:

BACK NEXT EXIT

Record your PPPoE information here:

Username: _____

Password: _____

- 9** Complete the configuration and click **NEXT**.

Quick Start Complete !!

The Setup Wizard has completed. Click on **BACK** to modify changes or mistakes. Click **NEXT** to save the current settings.

BACK NEXT EXIT

- 10** Quick Start has completed. Click **CLOSE** to make your settings take effect.

Quick Start Completed !!

Saved Changes.

CLOSE

The basic settings for your modem router are completed. Please open the web browser and try to log on to **http://www.tp-link.com** to test your Internet connection.



For the advanced configurations, please refer to the User Guide at **http://www.tp-link.com**.

Troubleshooting

T1. How can I set my computer to Obtain an IP address / DNS server address automatically?

For Mac OS X

- Click the **Apple** icon on the upper left corner of the screen.
- Go to **“System Preferences -> Network”**.
- Select **Airport** on the left menu bar, and then click **Advanced** for wireless configuration; or select **Ethernet** for wired configuration.
- In the **Configure IPv4** box under **TCP/IP**, select **Using DHCP**.
- Click **Apply** to save the settings.

For Windows 7

- Click **“Start -> Control Panel -> Network and Internet -> View network status -> Change adapter settings”**.
- Right-click **Wireless Network Connection** (or Local Area Connection), and then click **Properties**.
- Select **Internet Protocol Version 4 (TCP/IPv4)**, and then click **Properties**.
- Select **Obtain an IP address automatically and Obtain DNS server address automatically**. Then click **OK**.

For Windows XP

- Click **“Start -> Control Panel -> Network and Internet Connections -> Network Connections”**.
- Right-click **Wireless Network Connection** (or Local Area Connection), and then click **Properties**.
- Select **Internet Protocol (TCP/IP)**, and then click **Properties**.
- Select **Obtain an IP address automatically and Obtain DNS server address automatically**. Then click **OK**.

For Windows 8

- Move your mouse to the lower right corner and click the Search icon in the Popups.
- Go to **Apps**, type **Control Panel** in the search box and press **Enter**.
- Go to **“Control Panel -> View network status and tasks > Change adapter**
- Right-click **Ethernet**, select **Properties**. Then double-click **Internet Protocol Version 4 (TCP/IPv4)**.
- Select **Obtain an IP address automatically and Obtain DNS server address automatically**. Then click **OK**.

 
T2. What can I do if I cannot access the Internet?

- Check your cables and make sure they are all plugged in correctly, including the telephone line, Ethernet cables and power adapter.
- Check to see if you can log on to the web management page of the modem router. The default address of the web management page is **http://192.168.1.1**. If you can, try the following steps. (If you can not, please refer to **T1** to configure TCP/IP Properties and then try to access the Internet again.)
- Consult your ISP and make sure all the VPI/VCI, Connection Type, account username and password are correct. If they are not, please replace them with the correct settings and try again.
- If you still cannot access the Internet, please restore your modem router to its factory default settings and reconfigure your modem router following the instructions in this QIG.
- Please contact our Technical Support if the problem still exists.

T3. How can I restore my modem router’s configuration to its factory default settings?

Once the modem router is reset, the current settings will be lost and you will need to reconfigure the modem router. We strongly suggest you back up the current settings before resetting the modem router. For more Backup information, please refer to 4.6.3 Firmware on User Guide.

With the modem router powered on, use a pin to press and hold the RESET button on the rear panel for 8 to 10 seconds before releasing it.



T4. What can I do if I forget my password?

Reset the modem router first and then use the default user name and password: **admin/admin**.



For more details about Troubleshooting and Technical Support contact information, please log on to our Technical Support website: **http://www.tp-link.com/en/support**



Technical Support

- For more troubleshooting help, go to **http://www.tp-link.com/en/support/faq**
- To download the latest Firmware, Driver, Utility and User Guide, go to **http://www.tp-link.com/en/support/download**
- For all other technical support, please contact us by using the following details:
 - Global**
Tel: +86 755 2650 4400
Fee: Depending on rate of different carriers, IDD.
E-mail: support@tp-link.com
Service time: 24hrs, 7 days a week
 - USA / Canada**
Toll Free: +1 866 225 8139
E-mail: support.usa@tp-link.com (USA)
support.ca@tp-link.com (Canada)
Service time: 24hrs, 7days a week
 - UK**
Tel: +44 (0) 845 147 0017
Fee: Landline: 1p-10.5p/min, depending on the time of day. Mobile: 15p-40p/min, depending on your mobile network.
E-mail: support.uk@tp-link.com
Service time: 24hrs, 7days a week
 - Turkey**
Tel: 0850 7244 488 (Turkish Service)
Fee: Depending on rate of different carriers.
E-mail: support.tr@tp-link.com
Service time: 09:00 to 21:00, 7days a week
 - Brazil**
Toll Free: 0800 608 9799(Portuguese Service)
E-mail: suporte.br@tp-link.com
Service time: Monday to Friday, 09:00 to 20:00; Saturday, 09:00 to 15:00
 - Italy**
Tel: +39 (02) 92392214
Fee: Depending on rate of different carriers.
E-mail: support.it@tp-link.com
Service time: Monday to Friday, 09:00 to 13:00; 14:00 to 18:00
 - Indonesia**
Tel: (+62) 021 6386 1936
Fee: Depending on rate of different carriers.
E-mail: support.id@tp-link.com
Service time: Sunday to Friday, 09:00 to 12:00, 13:00 to 18:00 *Except public holidays
 - Germany / Austria**
Tel :+49 1805 875 465 (German Service)
+49 1805 TPLINK
+43 820 820 360
Fee: Landline from Germany: 0.14EUR/min.
Landline from Austria: 0.20EUR/min.
E-mail: support.de@tp-link.com
Service Time: Monday to Friday, 09:00 to 12:30 and 13:30 to 18:00. GMT+1 or GMT+2 (DST in Germany)
* Except bank holidays in Hesse
 - Australia / New Zealand**
Tel: NZ 0800 87 5465 (Toll Free)
AU 1300 87 5465 (Depending on 1300 policy.)
E-mail: support.au@tp-link.com (Australia)
support.nz@tp-link.com (New Zealand)
Service time: 24hrs, 7 days a week
 - Singapore**
Tel: +65 6284 0493
Fee: Depending on rate of different carriers.
E-mail: support.sg@tp-link.com
Service time: 24hrs, 7 days a week
 - Ukraine**
Tel: 0800 505 508
Fee: Free for Landline; Mobile: Depending on rate of different carriers
E-mail: support.ua@tp-link.com
Service time: Monday to Friday, 10:00 to 22:00
 - Malaysia**
Toll Free: 1300 88 875 465
E-mail: support.my@tp-link.com
Service time: 24hrs, 7days a week
 - Poland**
Tel: +48 (0) 801 080 618
+48 223 606 363 (if calls from mobile phone)
Fee: Depending on rate of different carriers.
E-mail: support.pl@tp-link.com
Service time: Monday to Friday, 09:00 to 17:00. GMT+1 or GMT+2 (DST)
 - Switzerland**
Tel: +41 (0)848 800 998 (German Service)
Fee: 4-8 Rp/min, depending on rate of different time
E-mail: support.ch@tp-link.com
Service time: Monday to Friday, 09:00 to 12:30 and 13:30 to 18:00. GMT+ 1 or GMT+ 2 (DST)
 - France**
Tel: 0820 800 860 (French service)
Fee: 0.118 EUR/min from France
Email: support.fr@tp-link.com
Service time: Monday to Friday, 09:00 to 18:00 *Except French Bank holidays
 - Russian Federation**
Tel: 8 (499) 754 5560(Moscow NO.)
8 (800) 250 5560 (Toll-free within RF)
E-mail: support.ru@tp-link.com
Service time: From 09:00 to 21:00 (Moscow time)
*Except weekends and holidays in RF