

Tapo Robot Vacuum Replacement Kit

Replacement Frequency

To maintain optimal performance, maintain the robot vacuum according to the following guidelines.


Part	Maintenance Frequency	Replacement Frequency†
Main Brush	Every 2 weeks	6-12 months
Side Brush	Once a month	3-6 months
Filter	Once a week	3-6 months

†Replacement frequency may vary depending on the actual situation. Parts should be replaced if visible wear appears.


Main Brush

1. Turn the robot vacuum over, then unlatch and remove the main brush cover.


▮ If you have installed the mopping attachment, uninstall it from the robot vacuum first.

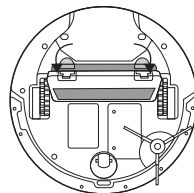

2. Replace with a new one.

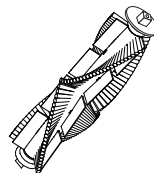


3. Press on the main brush cover to lock it in place.

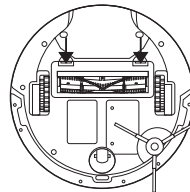


Side Brush

1. Use a screwdriver to unscrew the side brush **clockwise**.
2. Replace with a new one. Turn the new side brush **anticlockwise** to secure it tightly and ensure it's properly installed.

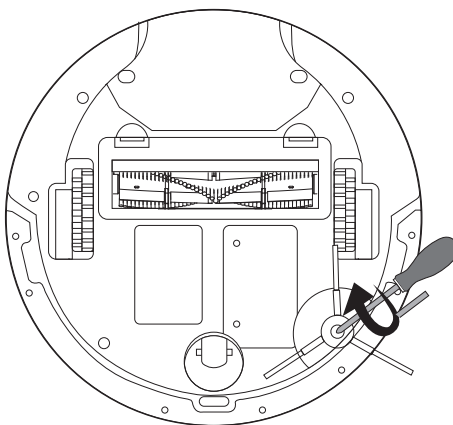

Filter

1. Remove the dustbin and open the lid.

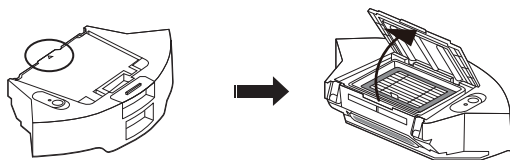

2. Replace with a new one.

