

Quick Start Guide

Smart Wire-Free Indoor/Outdoor Security Camera

*Images may differ from actual products.



Setup Video

Scan QR code or visit
<https://www.tp-link.com/support/setup-video/#cloud-cameras>




©2024 TP-Link

7106511087 REV1.3.0

01 / Charge the Battery

The battery comes partially charged. We recommend that you fully charge the battery before use. This will take about **seven and a half** hours.

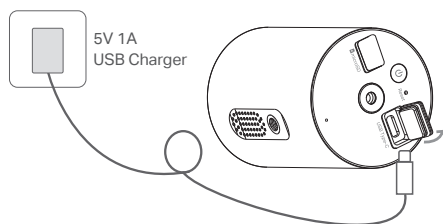

Notes:


1. Peel off film from the camera before use.
2. Charge the battery using the USB cable included in the package. Inappropriate cables may result in slow charging or failure to charge.
3. When you plug in the USB charger, the LED should blink amber quickly for 3 seconds. If not, make sure the power is running and check your connection.
4. Warning: Do not tear off the silicone part by force as it may affect the waterproof performance.
5. The camera may not power up after falling. Plug in the USB charger to power it on again.
6. Keep the ports firmly covered when not in use to ensure waterproof performance.
7. Check the battery status on the Tapo app after setup.

02 / Set Up the Camera

1. Get the Tapo app from the App Store or Google Play.




2. Press and hold on your camera for about 3 seconds to turn it on. Tap the in the app and select your model. Then follow the app instructions to set up your camera.

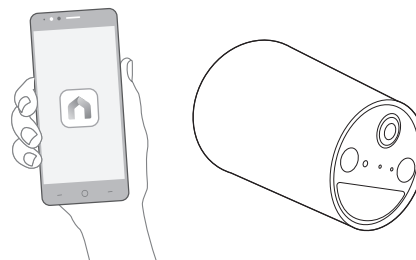


03 / Installation Options

Option 1. Set on a Table

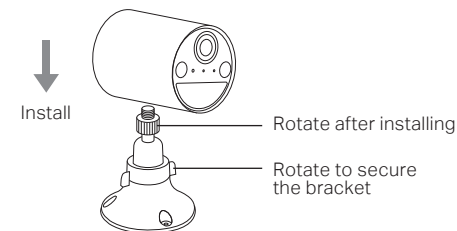


Option 2. Mount to the Wall

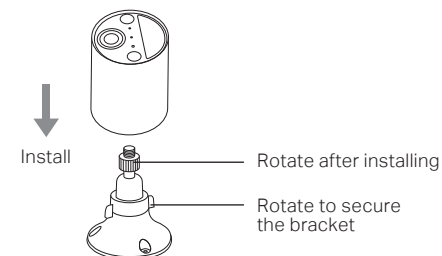


04 / Mounting Tips

1. Avoid placing behind glass. Glass will obstruct the motion sensor of your camera.
2. Choose a proper location to mount your camera, or it will be triggered too often by false alarms.
 - Avoid pointing the camera directly at swaying trees.
 - Avoid pointing the camera directly at vehicles and pedestrians on the road.
 - Avoid pointing the camera directly at street lamps and sunlight.
3. Mount your camera to the side so that movement goes across the lens' field of view to better trigger motion detection and AI detection.

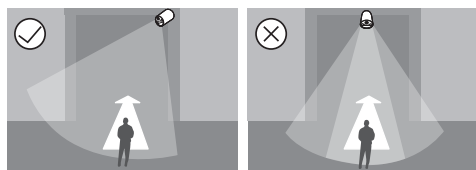


*Do not mount facing the direction of movement.

4. Tilt the camera downwards at an angle of about 20°.

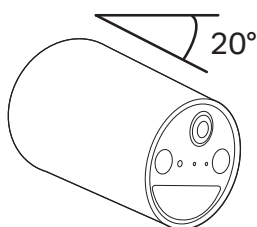


5. Do not place the camera upside down.
6. Keep the motion sensor level for best results.

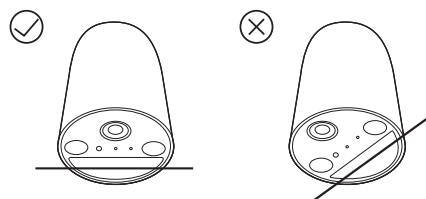

05 / Mount to the Wall


1. Drill Holes

Stick the mounting template to the desired mounting place. Drill 3 holes according to the template.

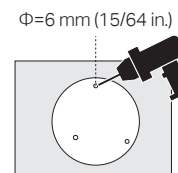


2. Install the Bracket

Insert three anchors into the holes and use the screws to affix the bracket over the anchors.

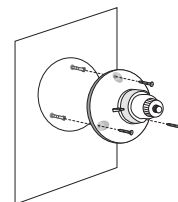

3. Install the Camera

Install the camera on the mounting bracket, and adjust the camera angle.

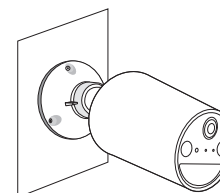

Have a Tapo Solar Panel?

The Tapo Solar Panel charges your Smart Wire-Free Indoor/Outdoor Security Camera continuously. Say goodbye to tricky wiring and dead batteries. Go solar effortlessly.

Connection Instructions

Visit
<https://www.tp-link.com/support/faq/3800/>
or scan QR code




If you don't yet have a Tapo Solar Panel, charge the rechargeable battery with a standard and high-quality DC 5V/1A battery charger. Keep the charging port firmly covered when fully charged.

Note: If you use a third-party solar panel to charge this camera, we cannot guarantee the waterproof performance.

Appearance

Front

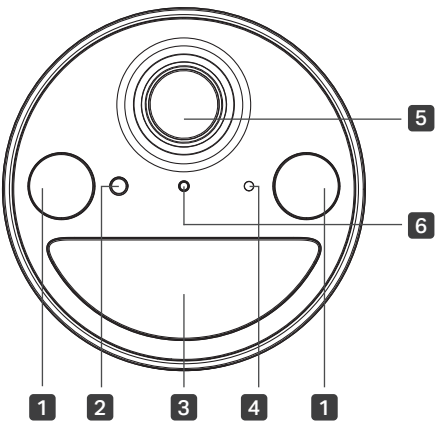

- 1

Spotlights
- 2

Light Sensor
- 3


Motion Sensor
- 4

Microphone
- 5

Lens
- 6

Status LED


Side

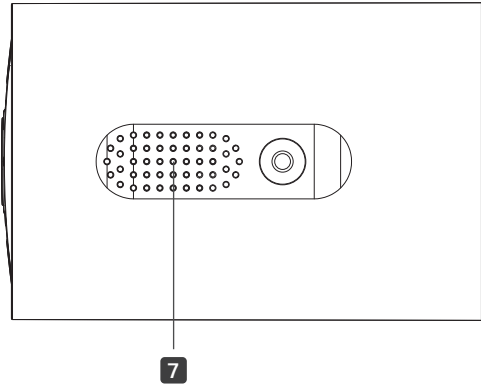

- 7

Speaker

Back

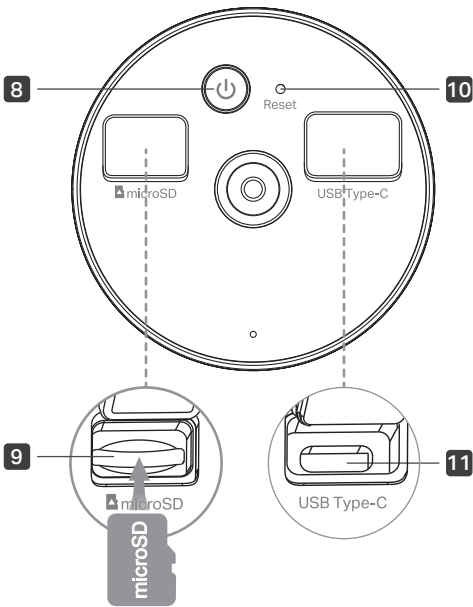

- 8

Power Button

Press and hold for about 3 seconds to turn on/off the camera.
- 9

microSD Card Slot

Open the cover. Insert a microSD card* and initialize it on the Tapo app for local recording.
*microSD card not included.
- 10

Reset Button

Use a pin to press and hold for at least 5 seconds to reset the camera to factory default settings.
- 11

USB Type-C Charging Port

Open the cover for USB charging.

Status LED Indication

Blinking amber quickly for 3 seconds	Plugging in USB charger
Solid red	Starting up
Blinking red and green	Ready for setup
Blinking red slowly	Connecting to Wi-Fi
Solid amber	Connected to Wi-Fi
Solid green	Connected to the cloud
Blinking red quickly	Camera resetting
Blinking green quickly	Camera updating



TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.
The original EU declaration of conformity may be found at <https://www.tapo.com/support/ce>
TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.
The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>

Safety Information

- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
- Do not disassemble, repair or modify the product.
- Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
- Do not use liquid to clean the product. Only use a dry cloth.
- Never put metal objects inside the product. If a metal object enters the product turn off the circuit breaker and contact an authorised electrician.
- This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequately shielded from external RF (radio frequency) energy.
- Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long time unplug the product from the power outlet.
- This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
- Operating Temperature: -20°C ~ 45°C (-4°F ~ 113°F)
- Adapter should be used indoors where the ambient temperature is lower than or equal to 40°C.

CAUTION!

Avoid replacement of a battery with an incorrect type that can defeat a safeguard.
Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

?

Visit www.tapo.com/support
for technical support, user guides,
and more information

